



Roura Material Handling, Inc.

35355 Forton Ct. Clinton Twp., Mi. 48035
Ph. (586)790-6100 Fax (586)790-6102
www.RouraMH.com

WALL (SINGLE SIDE) A-FRAME OPERATION AND SERVICE INSTRUCTION

- Make sure that all operation, service and safety information for this product is carefully read and understood before the a-frame product is to be used.
- The wall a-frame product should only be used to store stone slabs in its design position (on a stable floor and wall).
- Always fasten slabs carefully before placement of the material onto the wall a-frame.
- **Never walk under or stand under a suspended load.**
- Always keep the operation, service and safety documentation near the wall a-frame product while in use for future reference.
- In case of damaged product, please contact the manufacturer or dealer immediately.
- Always inspect parts to insure components are properly assembled and installed.
- Handle stone with care while on the wall a-frame.
- All wall a-frames should be located on level, flat and hard floors for proper installation.
- All wall a-frames should be located and fastened to flat and sound structured wall for proper installation.
- All wall a-frames should be secure to floor with provided holes in the a-frame uprights
- All wall a-frames should be secure to wall with provided holes in the a-frame uprights
- All slabs should be secured down to the wall a-frame during storage use to prevent slab movement.
- Never use a wall a-frame (single side) model for transporting or moving slabs. This product is designed for storage use only.
- Always make sure that no personnel are near the area of this product during use/storage.
- Be sure to execute safe clothing practices when using this product in accordance with valid regulation.
- Always provide a clean and well lit area for the wall a-frame product during use to avoid dangerous environment.
- Remove all articles from the work/storage area, which can have a negative impact on the proper use of the wall a-frame.
- Always inspect the wall a-frame before each use. Check all parts and welded seams for damage or rusted surfaces to the product. In case of defects, **DO NOT USE THE A-FRAME**. Report all defected issues to the appropriate personnel.
- **ONLY AUTHORIZED PERSONS MAY USE THE WALL A-FRAME. EACH USER MUST HAVE READ AND UNDERSTOOD THIS DOCUMENT.**